



10304001/10304002

Aquilon Trap
User Manual

Contents

I. Disclaimer	3
LIMITED WARRANTY & DISCLAIMER	3
LIMITATION OF LIABILITY	5
II. Safety	6
2.1 After Sales Support	7
III. Aquilon Trap Introduction	8
3.1 Overview	8
IV. Technical Specifications	9
V. Proper Use	10
VI. Inspection	10
VII. Packing List	11
VIII. Operating Instructions	11
8.1 Preparation and Precautions Prior to Use.....	11
8.2 User Interface	12
8.3 Startup	13
8.4 Setting of parameters.....	13
8.5 Start / Stop Cooling Operation	14
IX. Troubleshooting	15
X. Maintenance and Cleaning	15

I. Disclaimer

- The intellectual property rights for this manual belongs to Holland Green Science Corporation (hereinafter referred to as “the Company”).
- Products of the company are under the patent protection of China and other countries and regions (inclusive of obtained patents and patents currently under application).
- The company reserves the right to change product specifications without notice.
- The contents of the manual are subject to change without notice.
- The manual’s content must not be copied, extracted, or modified in any form without the Company’s permission.

LIMITED WARRANTY & DISCLAIMER

Products sold by the Company are intended solely for the use(s) specified by the manufacturer and are not to be used for any other purposes including, but not limited to, unauthorized commercial purposes. Buyer warrants and represents that Buyer will properly test, use, qualify, and/or validate each Product for intended use, and, to the extent authorized, manufacture and market any final articles made from the Company’s Products in accordance with the practices of a reasonable person who is an expert in the field, and in strict compliance with all applicable national, state and local laws and regulations. Buyer acknowledges and understands that the purchase of Products only conveys to Buyer the non-transferable right for only the Buyer to use the Products purchased in compliance with the applicable manufacturer's Published User Statement, Limited User Statement, or Limited License, if any. While this manual contains certain representations of the potential dangers from the instrument or equipment, Buyer is solely responsible for conducting any research necessary to learn the hazards involved for any of its intended uses of the instrument or equipment purchased from the Company and to properly warn its customers, employees and other personnel who may be exposed to such instrument or equipment of any risks involved in using or handling the instrument or equipment.

The Company warrants that this product will operate or perform substantially in conformance with the Company’s published specifications and be free from defects in material and workmanship, when subjected to normal, proper and intended storage and usage by properly trained personnel, for the duration of the manufacturer’s warranty period set forth in this product documentation, published specifications or package inserts. If a manufacturer’s warranty period is not specified in the product documentation, published specifications or package inserts, the warranty period shall be one (1) year from the date of Bill of Sale to Buyer for equipment, and the earlier of any stated expiration dates or ninety (90) days for all other products (the "Warranty Period"). The Company agrees during the Warranty Period, to repair or replace, at the Company’s option, defective Products so as to cause the same to operate in substantial conformance with said published specifications; provided that Buyer shall (a) promptly notify the Company in writing upon the discovery of any defect, which notice shall include the product model and serial number (if applicable) and details of the warranty claim; and (b) after the Company’s review, the Company will provide Buyer with service data and/or a Return Material

Authorization ("RMA"), which may include biohazard decontamination procedures and other product-specific handling instructions, then, if applicable, Buyer may return the defective Products to the Company with all costs prepaid by Buyer. Replacement parts may be new or refurbished, at the election of the Company. All replaced parts shall become the property of the Company. Shipment to Buyer of repaired or replacement Products shall be made in accordance with the Delivery provisions of the Terms & Conditions agreed to by the purchase of this product. Consumables are expressly excluded from this warranty.

Notwithstanding the foregoing, Products supplied by the Company but not manufactured by the Company are not warranted by the Company, and the Company disclaims all warranties associated with the accuracy of any original manufacturer or third-party supplier Product information, but the Company agrees to assign to Buyer any warranty rights in such Product that the Company may have from the original manufacturer or third-party supplier, to the extent such assignment is allowed by such original manufacturer or third-party supplier.

In no event shall the Company have any obligation to make repairs, replacements or corrections required, in whole or in part, as the result of (i) normal wear and tear, (ii) accident, disaster or event of force majeure, (iii) misuse, fault or negligence of or by Buyer, (iv) use of the Product in a manner for which they were not designed, (v) causes external to the Product such as, but not limited to, power failure or electrical power surges, (vi) improper storage and handling of the Product or (vii) use of the Product in combination with equipment or software not supplied by the Company. If the Company determines that Product for which Buyer has requested warranty services are not covered by the warranty hereunder, Buyer shall pay or reimburse the Company for all costs of investigating and responding to such request at the Company's then prevailing time and materials rates. If the Company provides repair services or replacement parts that are not covered by this warranty, Buyer shall pay the Company therefor at the Company's then prevailing time and materials rates.

ANY INSTALLATION, MAINTENANCE, REPAIR, SERVICE, RELOCATION OR ALTERATION TO OR OF, OR OTHER TAMPERING WITH, THE PRODUCT PERFORMED BY ANY PERSON OR ENTITY OTHER THAN THE COMPANY WITHOUT THE COMPANY'S PRIOR WRITTEN APPROVAL, OR ANY USE OF REPLACEMENT PARTS NOT SUPPLIED BY THE COMPANY, SHALL IMMEDIATELY VOID AND CANCEL ALL WARRANTIES WITH RESPECT TO THE PRODUCT.

THE OBLIGATIONS CREATED BY THIS WARRANTY STATEMENT TO REPAIR OR REPLACE A DEFECTIVE PRODUCT SHALL BE THE SOLE REMEDY OF BUYER IN THE EVENT OF A DEFECTIVE PRODUCT. EXCEPT AS EXPRESSLY PROVIDED IN THIS WARRANTY STATEMENT, THE COMPANY DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, WITH RESPECT TO THE PRODUCTS, INCLUDING WITHOUT LIMITATION ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE. THE COMPANY DOES NOT WARRANT THAT THE PRODUCTS ARE ERROR-FREE OR WILL ACCOMPLISH ANY PARTICULAR RESULT.

NOTHING IN THIS MANUAL OR IN THE TERMS AND AGREEMENT AGREED TO AT THE TIME OF PURCHASE SHALL BE CONSTRUED TO PROVIDE FOR THE TRANSFER, ASSIGNMENT OR ALIENATION OF THE LIMITED WARRANTIES PROVIDED BY THE

COMPANY HEREIN TO ANY OTHER PARTY OTHER THAN BUYER, INCLUDING BUT NOT LIMITED TO, SUCCESSORS, HEIRS, SUBSIDIARIES OR ANY OTHER THIRD PERSON.

THE WARRANTIES IDENTIFIED ABOVE ARE THE SOLE AND EXCLUSIVE WARRANTIES WITH RESPECT TO THIS PRODUCT AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES ARE EXPRESSLY DISCLAIMED, INCLUDING, WITHOUT LIMITATION, THOSE OF NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR A SPECIFIC PURPOSE OR USE (WHETHER ARISING FROM STATUTE, OR OTHERWISE IN LAW, OR FROM A COURSE OF DEALING, OR USAGE OF TRADE). THIS WARRANTY IS NOT TRANSFERABLE FROM THE ORIGINAL PURCHASER TO A SUBSEQUENT OWNER. FURTHER, THE COMPANY IS NOT LIABLE IN CASES OF DELIBERATE, NEGLIGENT OR ACCIDENTAL MISUSE OF THE PRODUCTS, USE WITH INAPPROPRIATE REAGENTS OR CONSUMABLES, DAMAGE CAUSED BY DISASTER, REPAIR OR MODIFICATIONS DONE BY ANYONE OTHER THAN THE COMPANY. THE COMPANY DOES NOT WARRANT THAT THE PRODUCT WILL NOT INFRINGE THE INTELLECTUAL PROPERTY RIGHTS OF A THIRD PARTY EITHER ALONE OR IN COMBINATION WITH OTHER PRODUCTS OR IN THE OPERATION OF ANY PROCESS. THE COMPANY'S TOTAL LIABILITY FOR BREACH OF THESE WARRANTIES SHALL BE LIMITED TO THE GROSS PURCHASE PRICE FOR THE PRODUCT AS STATED IN THE RELEVANT INVOICE OR ORDER UNDER WHICH THE ACTIVITY GIVING RISE TO LIABILITY ARISES. UNDER NO CIRCUMSTANCES SHALL THE COMPANY BE LIABLE FOR INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL OR PUNITIVE DAMAGES (INCLUDING LOSS OF BUSINESS OR PROFITS) UNDER ANY THEORY OF LIABILITY HEREUNDER.

For claims under the warranty please contact your local supplier. You may also send the instrument directly to manufacturer, enclosing the invoice copy and by giving reasons for the claim.

LIMITATION OF LIABILITY

NOTWITHSTANDING ANYTHING TO THE CONTRARY CONTAINED HEREIN, THE LIABILITY OF THE COMPANY UNDER THESE TERMS AND CONDITIONS (WHETHER BY REASON OF BREACH OF CONTRACT, TORT, INDEMNIFICATION, OR OTHERWISE, BUT EXCLUDING LIABILITY OF THE COMPANY FOR BREACH OF WARRANTY (THE SOLE REMEDY FOR WHICH SHALL BE AS PROVIDED UNDER THIS SECTION) SHALL NOT EXCEED AN AMOUNT EQUAL TO THE LESSER OF (A) THE TOTAL PURCHASE PRICE THEREFORE PAID BY BUYER TO THE COMPANY WITH RESPECT TO THE PRODUCT(S) GIVING RISE TO SUCH LIABILITY OR (B) ONE HUNDRED THOUSAND DOLLARS (\$100,000), WHICHEVER IS LESS.

With respect to any software products incorporated in or forming a part of the Product hereunder Buyer intends and agrees that such software products are being licensed and not sold, and that the words "purchase", "sell" or similar or derivative words are understood and agreed to mean "license", and that the word "Buyer" or similar or derivative words are understood and agreed to mean "licensee". Notwithstanding anything to the contrary contained herein, The COMPANY or its licensor, as the case may be, retains all rights and interest in software products provided hereunder. See the Terms & Conditions of purchase for details regarding such license.

II. Safety



IMPORTANT Safety Items to be Observed.

Safety Warnings

! DANGER (may cause serious damage to property and or casualties)

1. Please carefully read this User Manual prior to operating the instrument and observe the instructions on safe operation.
2. Ensure that only trained staff operate this instrument
3. The power source must be grounded reliably and away from any sources of electromagnetic interference.
4. Ensure that the instrument and its accessories are free of any potential defects.
5. Confirm that the voltage and frequency of the power supply matches the specified voltage and frequency specified prior to use.
6. Ensure the cover of the junction box is properly installed prior to operation.
7. Always wear applicable PPE whilst operating the instrument.
8. Place the instrument on a stable, dry, clean, antiskid, and fireproof surface.
9. Ensure there is sufficient ventilation gaps and spacing above and around the instrument
10. Ensure the instrument is stable and level and will not move due to vibration upon start-up.
11. Liquid must not enter the casing

! WARNING (may cause property damage or personal injury)

12. The working environment must be free of any flammable, explosive, volatile or corrosive substances.
13. Only accessories listed as 'optional accessories' for use, can guarantee operational safety.
14. Ensure handling and disposal of packaging is compliant to local environmental laws and regulations.

! ATTENTION (may affect operational performance or service life)

15. The instrument is deenergised only when the power cable is disconnected from the power source.
16. Ensure the instrument and its accessories are protected external vibration.
17. The Company reserves the right to modify the design and technical data of the pump without notice.
18. Only accredited and qualified professional repair technicians can open the instrument or conduct required repairs. Persons performing repairs on the instrument other than those selected or approved by the Company shall operate to void any warranty contained hereinabove for the product
19. Do NOT operate this instrument immediately after transport, wait 1-2 days before operating. The instrument must be used in accordance with this User Manual.

2.1 After Sales Support

If problems are encountered or technical support is required when installing or using the instrument, please contact serviceusa@hollandgreenscience.com

The Company may provide technical assistance and information regarding the instrument or equipment or Service without charge at its sole discretion. Buyer assumes sole responsibility for any reliance on or use of such assistance and information, and the Company makes no warranty thereon.

Upon contact the following information is required:

- Product serial number (located on the instrument nameplate)
- Description of issue or problem
- Method and or operating steps you have undertaken towards resolution.
- Your contact details inclusive of telephone number and email address.

III. Aquilon Trap Introduction

The Aquilon cold trap relies on the rapid cooling of the refrigeration system to reach the required temperature. The glass series condenser collection device is installed within the liquid tank and used within the vacuum system to ensure reliable operation of the vacuum system.

The liquid inlet and outlet connections are located at the rear of the cabinet.

3.1 Overview



IV. Technical Specifications

Model		10304001	10304002
Product Name		Aquilon Trap	Aquilon Trap
Collection Method		Glass Condenser Immersion	
Performance	Collection Amount	Max.1.2L	Max.1.2L
	Lowest Temperature	- 40°C	- 80°C
Features	Security Function	Compressor delay start, machine leakage, overcurrent, overvoltage protection	
Composition	Cooling Capacity and Refrigerant	Air cooling 400W R404A	Air cooling 100W R404A, R23
	In-Tank Size (mm) Capacity (L)	φ220mm*180mm 6.8L	
	PC Slot Cover Connection Diameter	φ139.0mm 1 hole	
	Glass Condenser Connection	φ10mm (Match with diaphragm pump)	
Ambient Temperature Range		5-35°C	
External Size (mm)		315*500*570	500*640*700
Power Supply, Machine Power		115V/60Hz/850W	115V/60Hz/1350W
Ventilation and Spacing Required (mm)		300mm minimum surrounding space for ventilation	
Operation Notes		<p>Add Antifreeze into the cold trap tank, then immerse the glass condenser in the liquid.</p> <p>The vapor is then condensed and trapped in the glass condenser by cooling and decompression within the glass condenser.</p>	



V. Proper Use

The instrument is designed for non-residential use and to be used in conjunction only with accessories recommended within this manual and by the manufacturer.

VI. Inspection

Unpack the equipment carefully and check for any damage which may have arisen during transport. In the event of identified damage, please contact serviceusa@hollandgreenscience.com

	<p>CAUTION:</p> <p>If there is any visible damage to the instrument, please do not connect the instrument to a power supply.</p>	
--	---	--

VII. Packing List

Main unit	1
Glass collection bottle	1
Connecting pipe	2
PC cover	1
Power Cord	1
Quick setup card	1

VIII. Operating Instructions

8.1 Preparation and Precautions Prior to Use

- a. The instrument must be placed on a flat and level surface composed of non-combustible materials.
- b. 300mm (minimum) of clearance is required around the instrument to ensure the front and back ventilation grilles are well ventilated.
- c. This instrument is equipped with a compressor. If the instrument is transported, do NOT operate immediately. Stand in the correct position or location and wait 1 to 2 days prior to operating.
- d. When filling the liquid tank, ensure liquid does not enter the instrument casing.
- e. The liquid must cover the evaporator.
- f. Use an appropriate liquid for desired temperature range
- g. When the liquid is water, pay close attention to the temperature set point to prevent icing
- h. Do not mix liquids
- i. Tighten hose connections securely.
- j. During continuous operation, the connection between the bath cover and the circulation pump may become very cold. When touching these areas ensure suitable PPE is being worn.
- k. Do not transport the instrument with liquid inside the tank due to the potential of liquid ingress into the instrument.
- l. **Use only clean liquids** to prevent sediment or solids from entering the cooling system and damaging the instrument.

8.2 User Interface



- **TEMP:** Displays the measured temperature value. To set the desired temperature, press the **SETTINGS** key until the **TEMP SET** value flashes. Press the setting key again to confirm the parameter.
- **SET:** Displays the desired temperature value set manually.
- **RUN:** Indicates that the chiller is operating.
- **Cooling Indicator:** Indicates chiller is cooling.
- **Circulation Indicator:** Indicates pump is operating.
- **TIME:** Displays the set running time; this value counts down to zero and operation stops. To set a timer, press the **SETTINGS** key. When the **TIME** value flashes, enter the desired time using they arrow keys. Leave at zero if a timer is not needed.
- **Silence Indicator:** Indicates a silenced alarm.
- **Alarm Indicator:** Indicates an alarm.



Settings: Used for manually setting values and parameters.



Left Arrow: Shifts to the numbers on the left to set desired value.



Down Arrow: One push will decrease 1 digit; A long press will decrease digits faster.



Up Arrow: One push will increase 1 digit; A long press will increase digits faster.



Cooling Key: Press and hold key for more than 4 seconds to control start/stop the cooling function.



Circulation Key: Press to start/stop the circulation function.

8.3 Startup




Connect the power according to the power outlet.


Turn on the instrument at the main switch. The display shows the initialization sequence before the instrument is ready to use.


NOTE: Every time you turn on the instrument it will beep intermittently, the icon of visual alarm and the word “end” will appear on the display.

8.4 Setting of parameters

Temperature Setting




When the instrument is switched on, press the  button one time, and the set temperature value will start to flash. Set the desired temperature value with  or  keys


The  button allows for movement between the digits.

Confirm the set value with another press of  button.

Time Settings

Press the  button.

The last value of the set time (timer) will start to flash. Set the desired value (hh:mm) by pressing  or  keys. The  button allows for movement between the digits.

Confirm the set value with another press of  button.

NOTE: the value “00:00” indicates the operating mode is continuous, once you start with the START / STOP button, the system will continue maintaining the set temperature until it is stopped manually.

If you set the timer, such as one hour, the instrument will reach the set temperature and maintain it for one hour.

8.5 Start / Stop Cooling Operation

Before the refrigeration is turned on, please press



key to let the liquid circulate in the pipeline in advance.

After setting the operating parameters, press



button for 4 to 5 seconds to start the cooling process.

IX. Troubleshooting

Problem	Causes	Solution
No power	The power cord is unplugged or not plugged in correctly	Reinsert
	Tripped Breaker	Reset once, if a further trip occurs, contact serviceusa@hollandgreenscience.com

X. Maintenance and Cleaning

Keep the instrument dry and clean in routine operations.

Clean the outer surface with a non-abrasive cleanser and only connect the power supply when the entire instrument surface is dry.

If liquid or moist solids enters the instrument, please immediately disconnect the power supply and contact servicetusa@hollandgreenscience.com

- Surface stains on the instrument should be cleaned only by a clean, soft rag and detergent.
- The power must be disconnected before any maintenance or cleaning.
- Do not clean the instrument with any corrosive cleaning solutions.
- If the instrument is left unused for a long period, switch 'OFF' the power and store within a dry, clean, level, and stable surface at normal temperature.



Caution!

Before any Maintenance or Inspection, the Power Cable **MUST** be removed from the power socket.